

Cisco NX-OS Cheat Sheet (6.x, 7.x, 9.x)

Checkpoint & Rollback	Show Hardware Inventory & Serial Number
checkpoint <i>checkpoint_name</i> show checkpoint summary show checkpoint <i>name</i> checkpoint <i>name description description</i> show diff rollback-patch checkpoint <i>name running-config</i> rollback <i>running-config checkpoint name</i>	Show hardware inventory with serial numbers: show inventory Detailed hardware inventory: show hardware Display the switch serial number: show srom backplane 1
VDC Commands - Nexus 7K, 9K (9K Default VDC)	Environment Commands
Show VDCs: show vdc Create VDC (7K Only): vdc <i>vdc-name</i> Assign interfaces to a VDC: (within the VDC to which the interfaces will be allocated) vdc <i>vdc-name</i> allocate interface ethernet <i>##</i> View ports allocated to a VDC: show vdc <i>vdc-name membership</i> Switch to within a VDC: switchto vdc <i>vdc-name</i> switchback (use this command to exit the VDC)	Display environment: show environment Display temperature: show environment temperature Show fan environment: show environment fan Show power usage: show environment power Display system redundancy status: show system redundancy status Display CPU and Memory usage data: show system resources
Module Commands - Nexus 7000 Only	
Display the status of a module: show module <i>(#)</i> Identify line card using LED: locator-led <i>module #</i> no locator-led <i>module #</i> Power off an I/O or Interface module: poweroff <i>module #</i> no poweroff <i>module #</i> (use to restore power) Power off a Fabric module: poweroff <i>xbar #</i> no poweroff <i>xbar #</i> (use to restore power) Shutdown a Fabric module (for removal only): out-of-service <i>xbar #</i>	View the resources of a specific module: attach <i>module #</i> show system resources exit (use this command to exit the module) Shutdown a supervisor module (for removal only): out-of-service <i>module #</i> Power cycle a module: reload <i>module #</i> Purge module config (module must be off or removed): purge <i>module # running-config</i> Switch over to redundant supervisor module: system switchover
Interface Commands	vPC Commands
View the type of transceiver in a SFP port: show interface Ethernet <i>## transceiver</i> Port Channel interfaces: show run interface port-channel <i># membership</i> show lacp neighbor interface port-channel <i>#</i> show port-channel <i>{usage, database, summary}</i> Display all FEX units and their state, model, serial #: show fex show fex <i># detail</i> (FEX software version, port state) show fex <i># transceiver</i> (type, part number & serial #) Reset an interface config back to default settings: default interface Ethernet <i>##</i>	Show global VPC status: show vpc show vpc brief Show VPC peer status, role, MAC address & priority: show vpc role Show VPC consistency checks (very useful command): show vpc consistency-parameters global
Assorted Helpful Commands	
show cli history unformatted show feature show vrf show boot dir bootflash://sup-active{sup-standby}/ show interface status <i>module # inc connected</i>	show license usage show HSRP or VRRP copy run tftp: vdc-all show system reset-reason